


4x Sonar models

Front controls

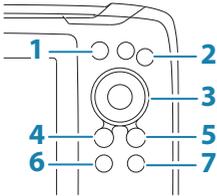

1	Pages	Press to toggle between the sonar and the flasher page.
2	Zoom in/out	Press to zoom the sonar image.
3	Arrows	In menus and dialogs: press the up/down arrows to highlight an option.
4	Exit (X)	Press to return to previous menu level and to exit a dialog.
5	Menu/Enter	With no menu or dialog active: press to display the menu. In menus and dialogs: press to confirm a selection.
6	Fish	Press to toggle between fish ID and traditional sonar echoes.
7	Power	Press to display the System Controls dialog. Press and hold to power the unit on/off.



System Controls dialog

Display illumination

- Set brightness and select day/night mode from the System Controls dialog
- Repeat short presses on the Power key to cycle the backlight brightness




Pages

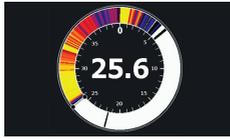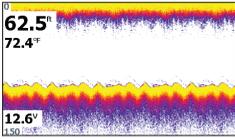


- Toggle between the Sonar and the Flasher pages by pressing the Pages key
- Zoom the sonar image by using the Zoom keys

By default the unit is set to **Auto** mode, and all settings are automated.

- Change to **Custom** mode to allow for customizing the settings.

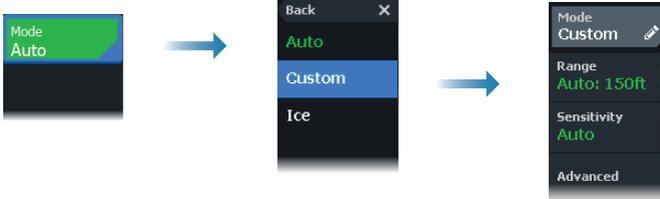

Overlay data

 


By default, 3 data items are displayed on the image. The data items are predefined (depth, temperature and voltage), and the position is fixed. The data items can be turned on/off from the System Controls dialog. Each data item can be removed individually from the image:



1. Select the **Edit overlay** option in the System Controls dialog to turn the unit into edit mode
2. Press the Menu/Enter key to display edit options
3. Press the X key to leave edit mode

Settings dialogs

Used for system configuration.

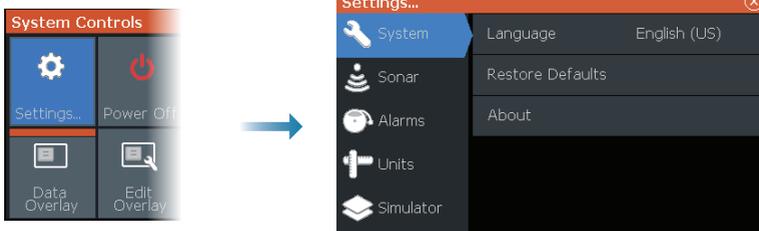

Product manuals

For the full Operator manual, technical specifications and declarations refer to the product website: www.lowrance.com.